


NB: DO NOT USE ANY FIRE CEMENT BETWEEN THE COLLAR AND THE LID OR PIPE.

Use a few strands of sealant rope between the narrow ridge and the lid as well as between the pipe and the collar.

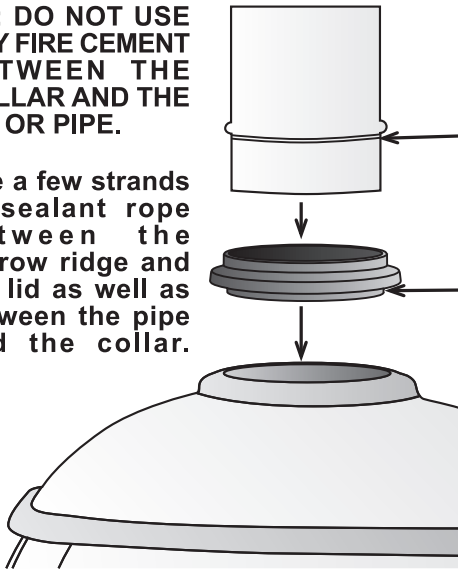


Push the pipe into the collar firmly as far as it will go.

Wider ridge towards the pipe.

Sealant Rope

Narrow ridge towards the pot.

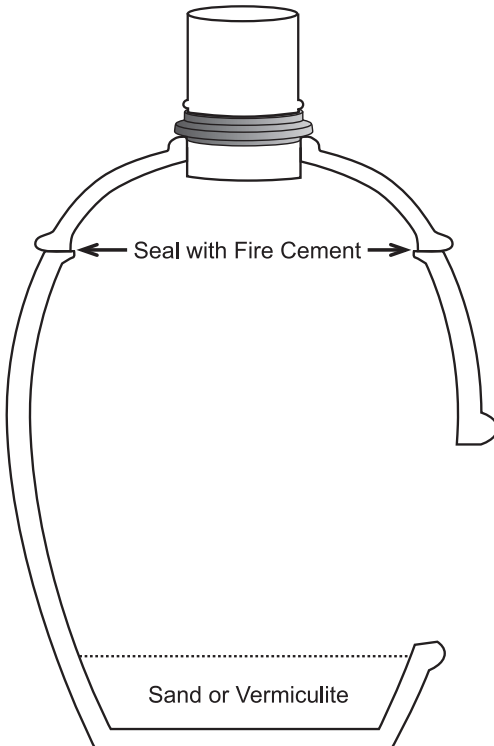

Fire Cement supplied as dry powder - mix with small quantity of water to make a stiff paste.

Only apply from the inside of the pot once the lid has been positioned. **DO NOT** apply between the pot and lid like bricks with mortar.

Wet the inside of the pot/lid joint with a sponge or cloth and apply the fire cement (powder mixed with water) with a finger.

DO NOT apply Fire Cement between the chimney pipe and lid or the cast iron flue collar.